


PO BOX 4394 SANTA ROSA, CA 95402 USA

P (707) 525-9941 F (707) 575-7046 EMGPICKUPS.COM

INSTALLATION INFORMATION EMG MODEL: MMTW

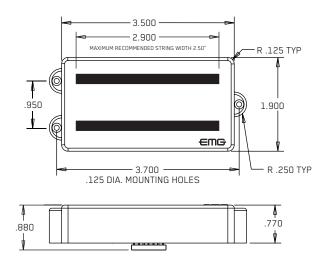

| SPECIFICATIONS:  | MODEL:<br>MMTW    | Single-Coil                        | Dual-Coil                          | EMG-MMTW (SIDE VIEW)  |
|--|-------------------|------------------------------------|------------------------------------|---|
| Logo Color Magnet Type* Resonant Frequency (KHz) Output Voltage (String) Output Voltage (Strum) Output Noise (60 Hz) Output Impedance (Kohm) | Copper<br>C/S     | 3.50<br>1.00<br>3.00<br>-107<br>10 | 2.50<br>2.00<br>4.50<br>-107<br>10 | EMG-MMTW (SIDE VIEW)  |
| Current (09V (Microamps) Battery Life (Hours) Maximum Supply (Volts DC) * Magnet Type CS (Ceramic and Steel)                                 | 160<br>1500<br>27 |                                    |                                    | In Dual-coil mode, coils L1 and L2 are active. In Single-coil mode, coils L2 and L3 are active. |

#### **INSTALLATION NOTES:**

The EMG-MMTW has a variety of ways it can be wired into a bass. The diagrams included are limited to the most popular because of space. The addition of the plug-on PC Board on the Push-Pull Pot adds further flexibility as you will see in the diagrams. We suggest you look fully at the installation diagrams included in this sheet along with the B157 Pickup Buss data sheet included in this package before beginning your installation. The Push-Pull Pot allows you 2 options as a volume control and 2 other options using the pot as a tone control. If you don't see a diagram that fits your instrument directly, or you want to do something completely different, contact our technical department and we'll create a diagram you can follow for your installation. Certain limitations apply...

# IMPORTANT INSTALLATION NOTES:

- 1) We recommend operating Dual-Coil EMG Pickups with an 18 Volt power supply. This will help avoid distortion, especially if you add EQ accessories to your instrument. Use an Alkaline or Lithium battery for longest life.
- 2) The Volume Control included with the EMG System is 25K Ohm. This value is required for the system to work correctly.
- 3) A stereo output jack (12B) is included with the EMG Pickups; it grounds the black battery wire to turn on the pickups when the plug is inserted into the jack. If you are replacing passive pickups, make sure to use the jack included. If your guitar has a long panel jack make sure it is a stereo type, a Switchcraft 152B is recommended.
- 4) When installing any EMG Active Pickup, DO NOT connect the bridge ground wire. This wire is usually soldered to a volume or tone control casing and goes to the bridge. This wire grounds the strings and uses them and your body as a shield against hum and buzz. It also creates a shock hazard.

- EMG Pickups are shielded internally and DO NOT require string grounding. This greatly reduces the possibility of reverse polarity shock from microphones and other equipment.
- 5) Dynamic performance is affected by the distance between the pickup and the strings. We recommend experimenting with pickup height adjustment. Lowering the pickup will help reduce attack transients and often give your instrument a more natural sound.
- 6) If your installation is different from the diagrams in these instructions or you need additional diagrams visit our website: emgpickups.com for a complete listing of available diagrams.

# 7) SPECIAL NOTE:

The diagrams shown are for EMG Active Pickups. All diagrams show the Red Wire coming from the pickups connected to the battery. If you are installing EMG-HZ Passive Pickups refer to their diagrams. The Red Wire of the HZ Pickup is NOT for battery power, it is a coil wire.

## WARRANTY

All EMG Pickups and accessories are warranted for a period of two years. This warranty does not cover failure due to improper installation, abuse or damage. If upon examination the pickup is determined to be defective, a replacement will be made. Warranty replacement products are covered by this same warranty. This warranty covers only those pickups and accessories sold by authorized EMG Dealers. This warranty is not transferable.

#### Installation Instructions:

### EMG Model: MMTW

#### General Notes:

Every attempt has been made to make this a solderless installation.

There are some instances where this is not possible:

- If your instrument uses the long panel output jack and you had passive pickups you will need a new stereo output jack, the Switchcraft 152B is recommended.
   Soldering to the new jack will be required.
- 2) Some instruments may already have a battery holder installed, in that case soldering may be required.
- 3) Instruments with two pickups may need soldering to the selection switch in some installations.

#### Using the MMTW Push-Pull Switch


The Push-Pull Switch included allows you to choose between the two internal pickups of the EMG-MMTW, single-coil and dual-coil. The Push-Pull Pot has two seperate sections: The Switch and the pot, described below.


#### Refer to Diagrams #1 and #2

The push-pull switch section (DPDT) lets you choose between the single-coil sound and a dual-coil sound by pulling or pushing the pot shaft up or down. You have the option of having the single-coil sound in either the up or down position and vice-versa for the dual-coil sound. Diagrams #1 and #2 show how to connect the MMTW Pickup cable to choose either option. Select the diagram that suits you and push the cable connectors onto the single line 6-pin header.


Simply turn over cable connectors  ${\bf 1}$  and  ${\bf 2}$  to change the wire order and this will choose between the two options.

Connector 3 remains the same for either choice.

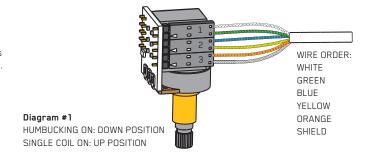


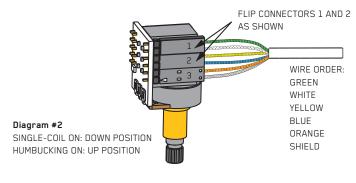

#### Diagram #3

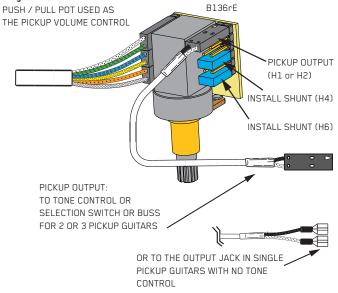

# Diagram #4

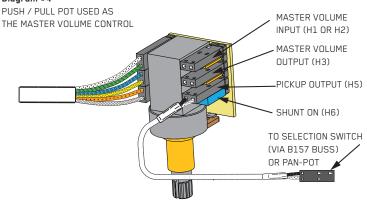

#### Using the MMTW Push-Pull Pot Section

The Push-Pull Pot side of the EMG-MMTW allows you 4 different options:

- 1) Use the pot as a Master Volume for the Instrument
- 2) Use the pot as a Volume control for the MMTW Pickup
- 3) Use the pot as a Master Tone control for the Instrument
- 4) Use the pot as a Tone control for the MMTW pickup

On the PC Board there is a dual-line header with 6 pairs of pins. They are listed on the PC Board as H1 through H6. By using the the connections shown in Diagrams #3 through #6, you can choose any of the 4 options.

# Using the Pot Section as:

H1 or H2.

## 1) The Pickup Volume control, or a Master Volume for the Instrument. Refer to Diagrams #3 and #4

The pot section (25KA) can be used either as a Volume control for the pickup or, it can be used as the Master Volume for the guitar. Diagrams #3 and #4 show how to connect either option. Use the dual-line 12-pin header and push the cables on and install the shunts as needed onto the labeled headers H1 thru H6.

Use Diagram #3 if you have a single MMTW installed in your instrument, or have two or more pickups in your instrument and want to use the pot as the Volume control for the MMTW Pickup only.

Installing the shunts on positions H4 and H6 sends the pickup signal to the wiper of the 25K Pot, and the output of the 25K Pot is at position

Diagram #4 allows you to use the 25K Pot independently of the pickup output. By taking the output of the pickup from position H5, the Volume control is now available to use as a Master Volume with H1 or H2 being the input to the Volume control. H1 and H2 positions are interchangeable.

Position H5, now the output of the pickup, would typically go to a selection switch or a pan-pot. Don't forget to install the shunt on H6.

# Diagram #5 PP POT USED AS THE PICKUP TONE CONTROL PICKUP OUTPUT (H1 or H2) INSTALL SHUNT ON (H4) PICKUP OUTPUT: TO VOLUME CONTROL SELECTION SWITCH OR

Diagram #9
One MMTW Pickup

# Installing the shunt on position H4 connects a tone capacitor on the PC Board SELECTION SWITCH OR... to the wiper of the 25K Pot and creates a passive Tone control. The output of pickup icanbe either position H1 or H2. Diagram #6 Diagram #6 uses the 25K Tone control independently of the pickup output. PUSH-PULL POT USED AS A MASTER OUTPUT OF TONE CONTROL TONE CONTROL By taking the output of the pickup from Position H5, the control is now (H1 or H2) ONLY IF NEEDED available to use as a Tone Control independent of the pickup output. INPUT TO TONE CONTROL (H3) Position H3 is the input to the Tone Control, with H1 or H2 being the output of $\,$ the control, if necessary. PICKUP OUTPUT Position H5, the output of the pickup, would typically go to a selection switch (H5)or output jack. PICKUP OUTPUT TO SELECTION SWITCH, EMG ACCESSORY, OR ... Diagram #7 Insert the plug onto the 7 pin header of the pickup as shown here. WW Note the orientation arrow. RED Diagram #8 One MMTW Pickup BATTERY Master Volume BUSS BATTERY PICKUP VOLUME NEG (-) OUTPUT CONTROL FROM MMTW PICKUP RED RED

Using the Pot Section as:

Refer to Diagrams #5 and #6

Tone control for the MMTW Pickup only.

2) The Pickup Tone control or as a Master Tone control for the instrument.

for the pickup or it can be used as a Master Tone control for the guitar.


Use Diagram #5 if you have a single MMTW installed in your instrument, or have two or more pickups in your instrument and want to use the pot as the

The pot section (25KA) can be used either as a Tone control

Diagrams #5 and #6 show how to connect either option.

Use the dual-line 12-pin header and push the cables on and

install the shunts as needed onto the labeled headers H1 thru H6.

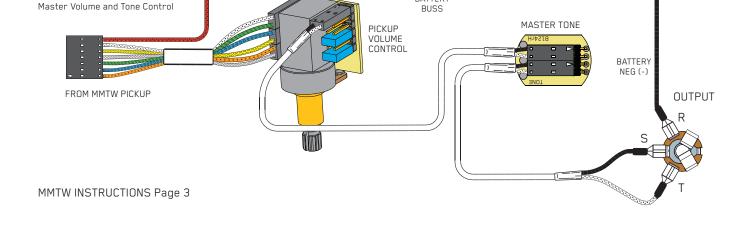

BATTERY

